

# Horn Contact Pin Assembly Installation Instructions

For Part Number 2612000010

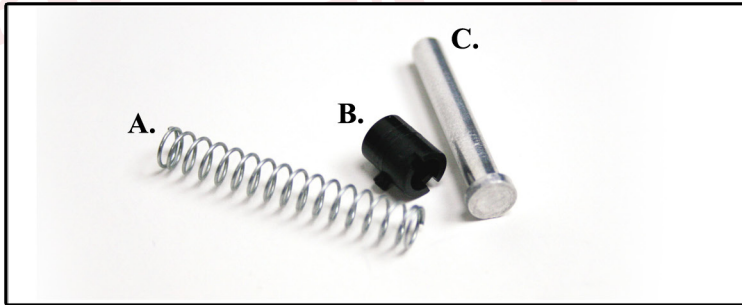


Figure 1

## Kit includes:

- 1 - Spring (A)
- 1 - Locking Sleeve (B)
- 1 - Pin (C)

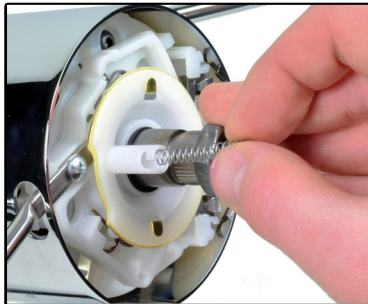


Figure 2



Figure 3

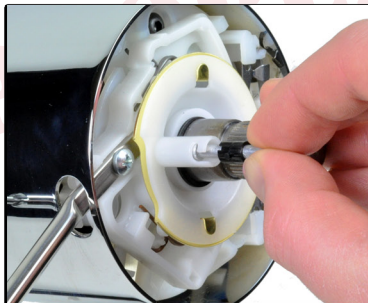


Figure 4

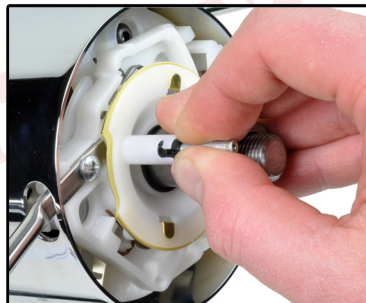


Figure 5

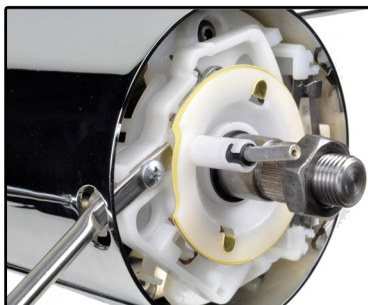


Figure 6

1. Insert spring into the white tube of horn cam. **(Figure 2)**
2. Slide black locking sleeve over the contact pin so that the sleeve sets on the large flat of the pin. **(Figure 3)**
3. With the large flat of the pin & holding the black sleeve, compress spring until the tab on the black sleeve lines up with the groove on the horn cam. **(Figure 4)**
4. Twist black sleeve to the right and lock into place. **(Figure 5)**
5. Once you have twisted locking sleeve into the groove, your installation of contact pin is now complete. **(Figure 6)**



[www.ididitinc.com](http://www.ididitinc.com)

ididit inc. 610 S. Maumee St. 49286 Tecumseh, MI PH: 517-424-0577 FAX: 517-424-7293